




AquaComfort ™
Service Repair Guide 2013

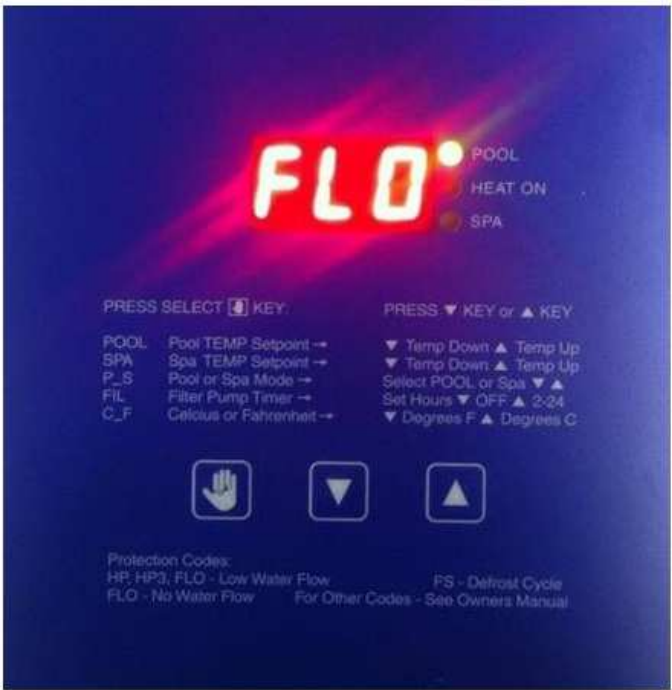

Flow Switch




Flow Switch

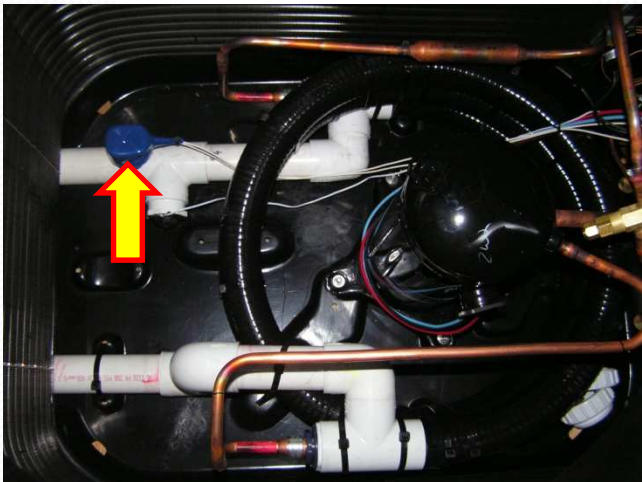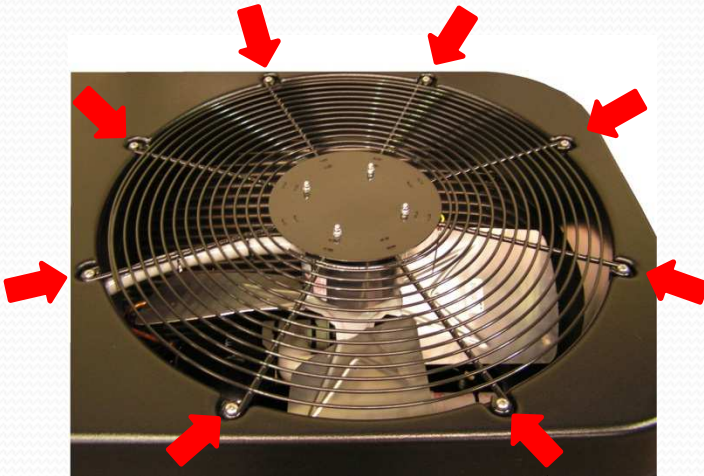


Danger! Disconnect power to heat pump before performing this operation.


Flow Switch

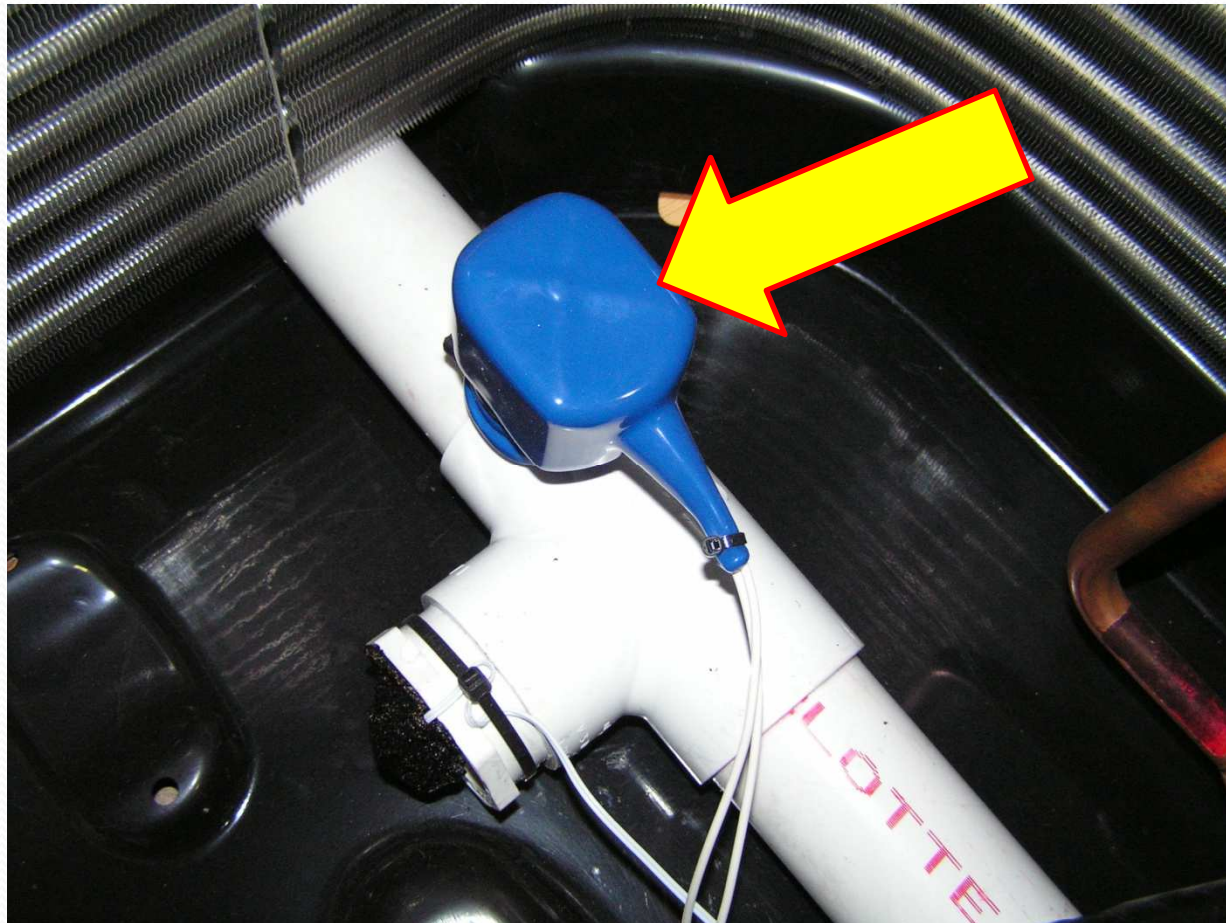

Refrigerant Pressure Switches

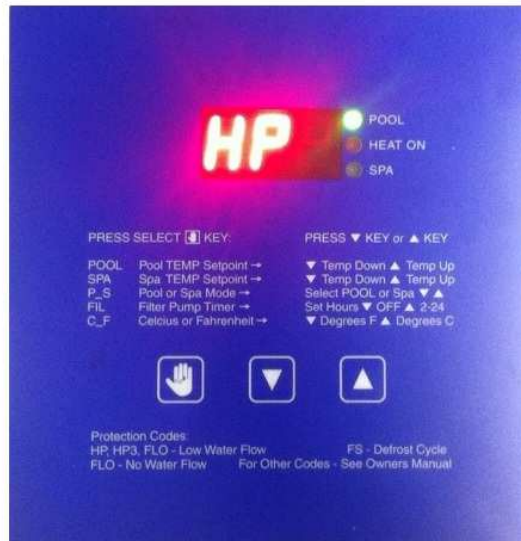

Refrigerant Pressure Switches

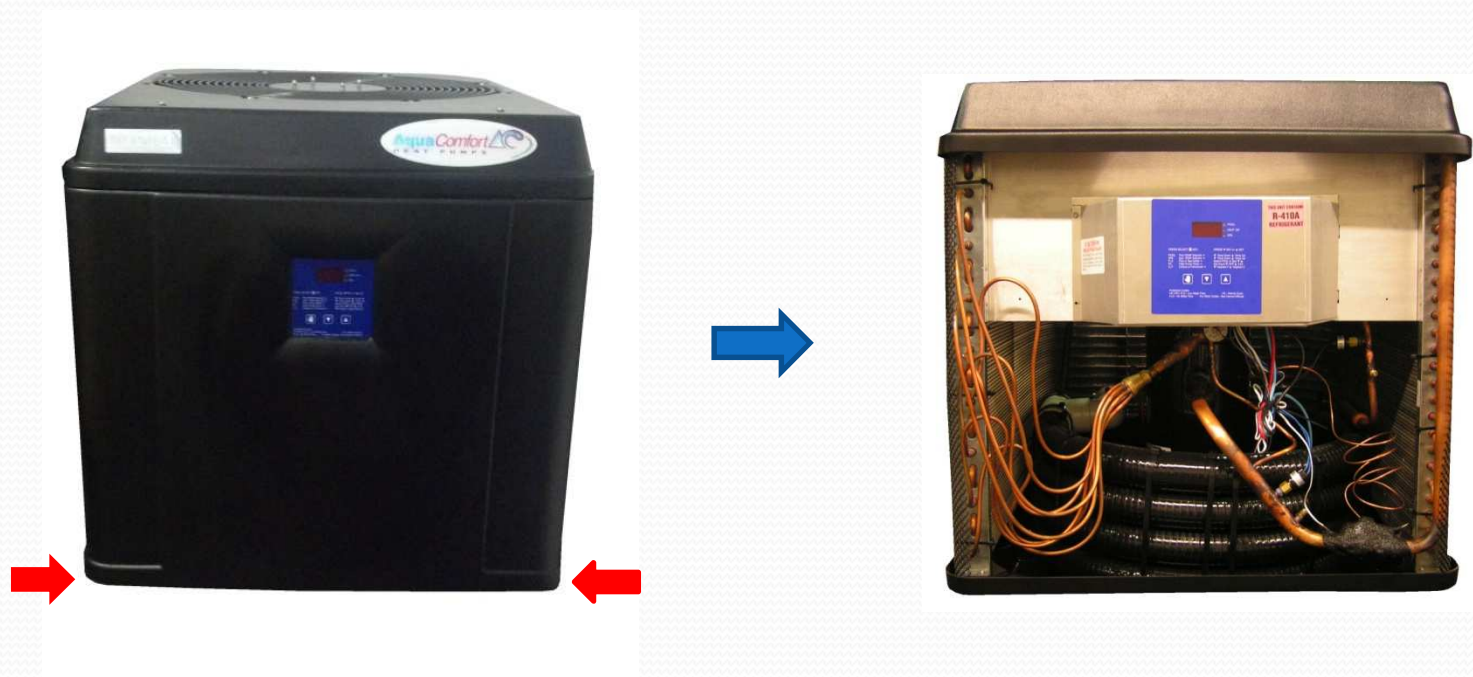


Refrigerant Pressure Switches




Danger! Disconnect power to heat pump before performing this operation.

Refrigerant Pressure Switches

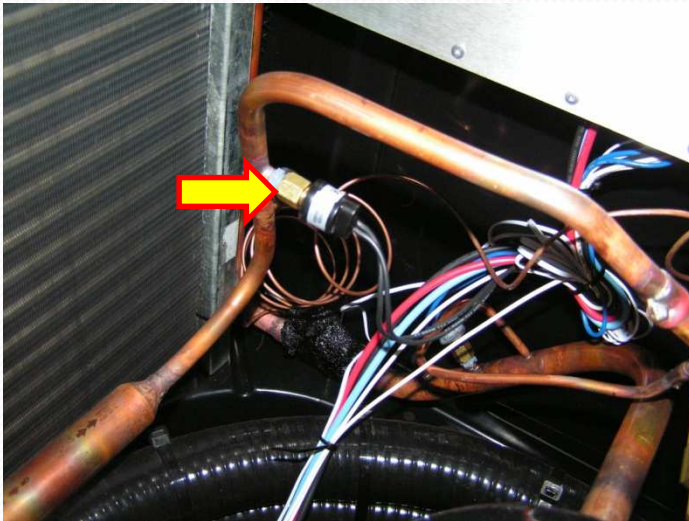

High Pressure Switch


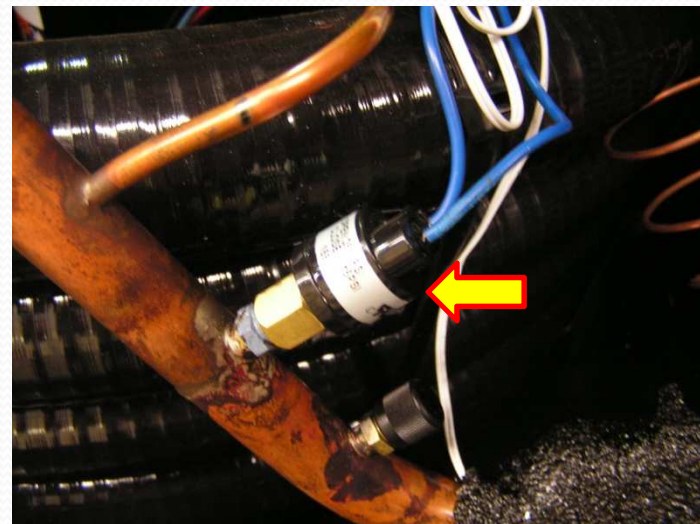


Low Pressure Switch

Defrost Sensor




Water Temp Sensor

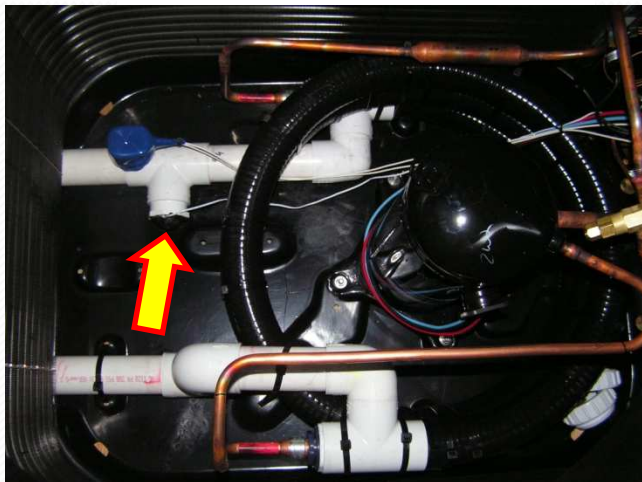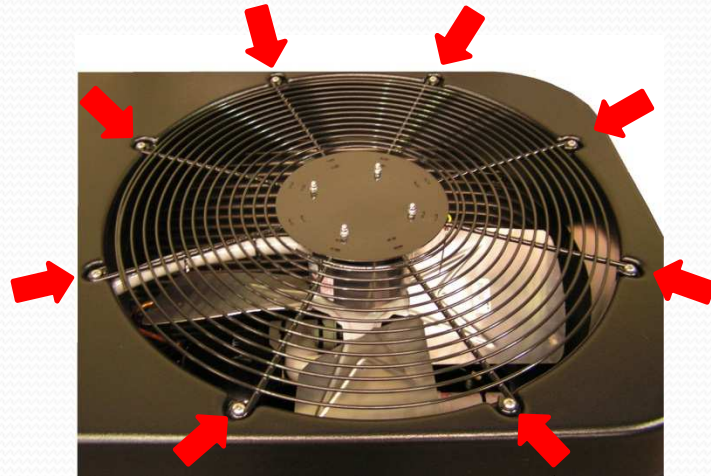

Danger! Disconnect power to heat pump before performing this operation.

Water Temp Sensor

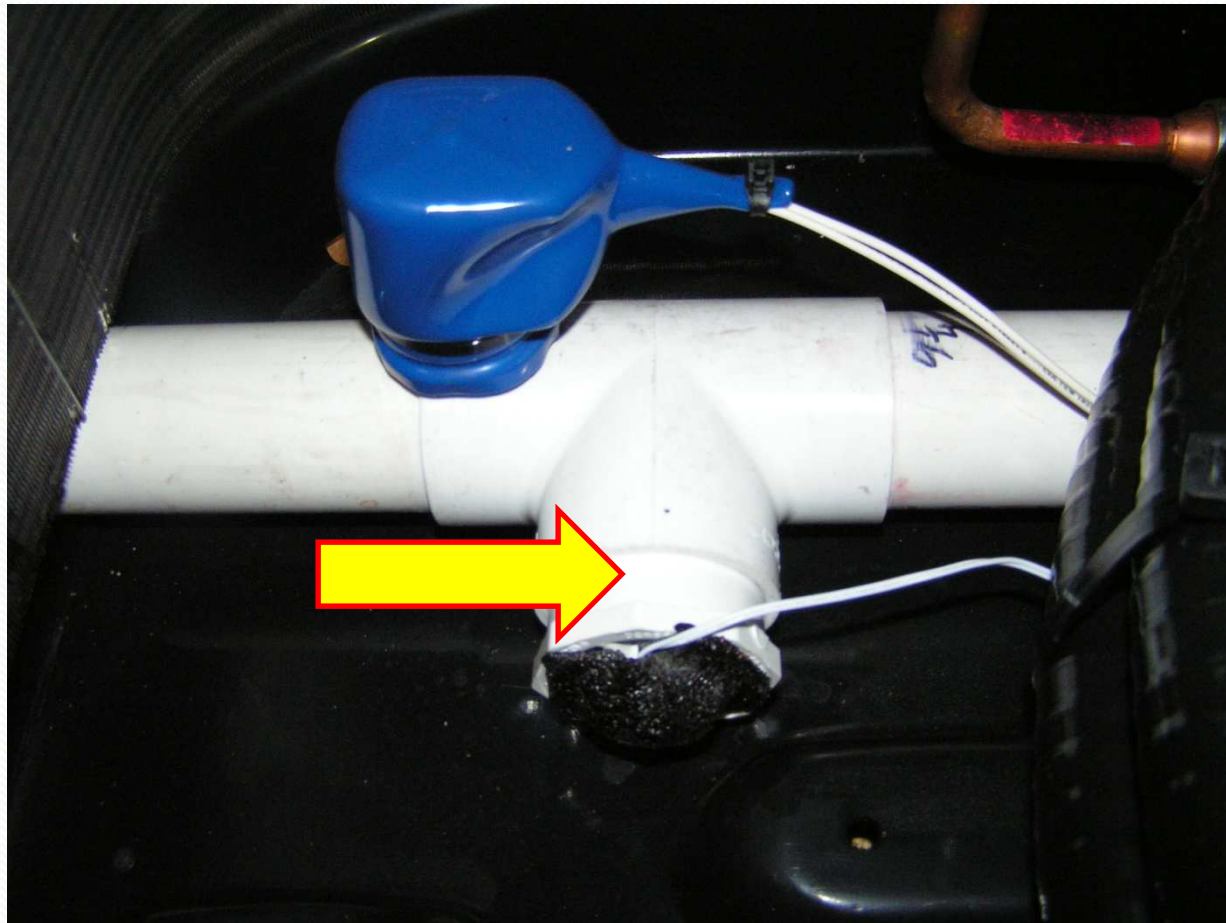

Control Box Components




Control Box Components



Danger! Disconnect power to heat pump before performing this operation.


Control Box Components

Control Board

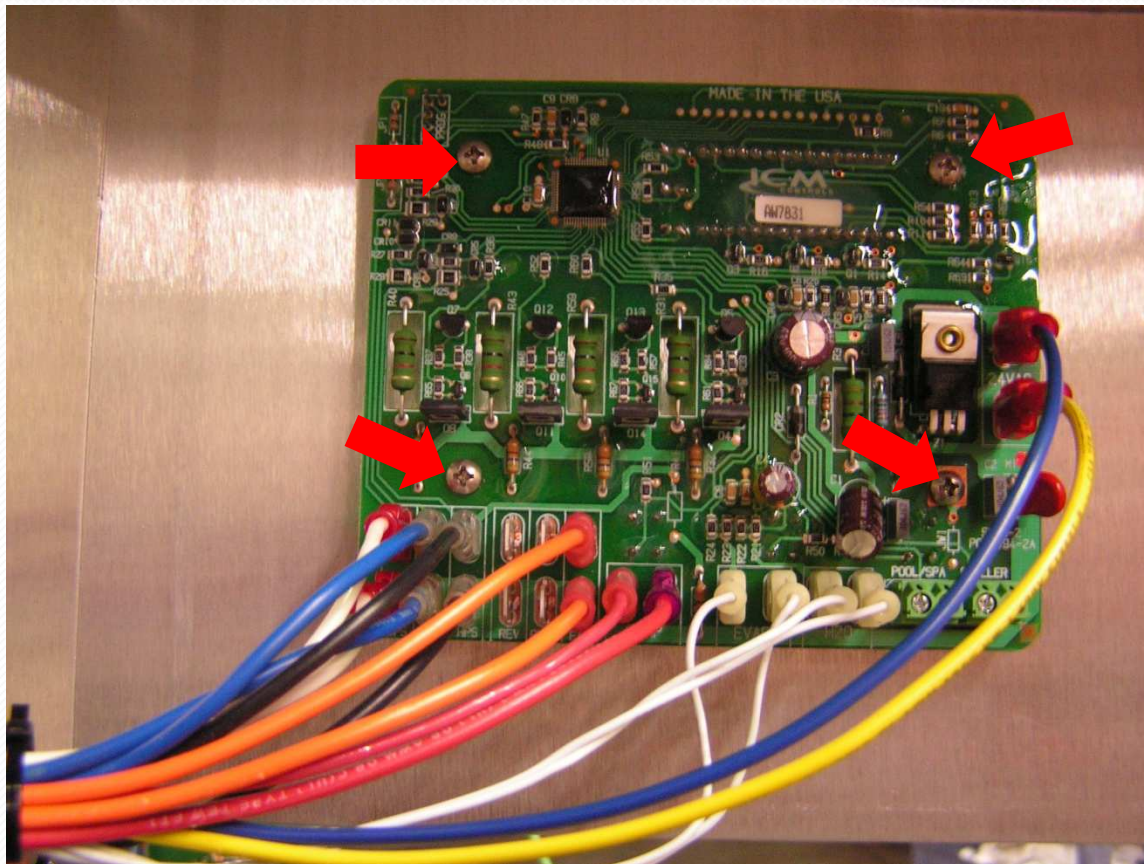

Control Box Components


Transformer

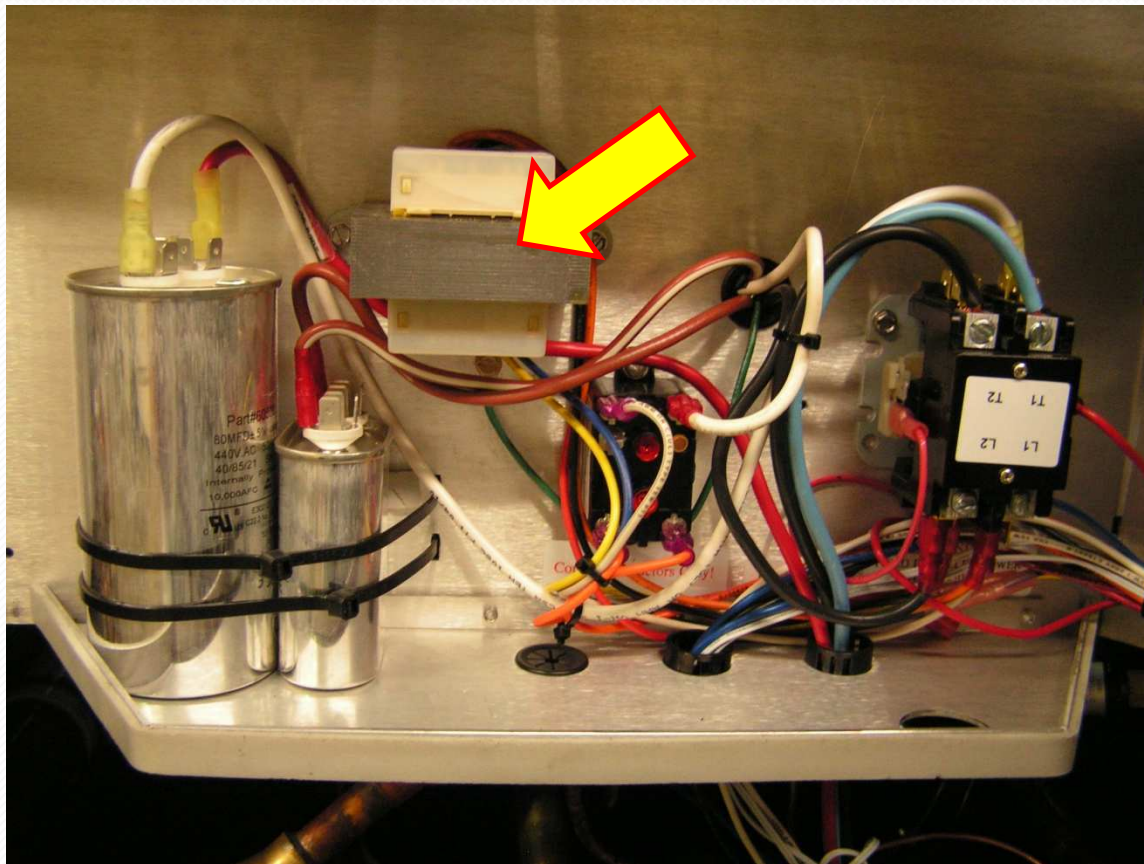

Danger! Disconnect power to heat pump before performing this operation.

Control Box Components


Contactor

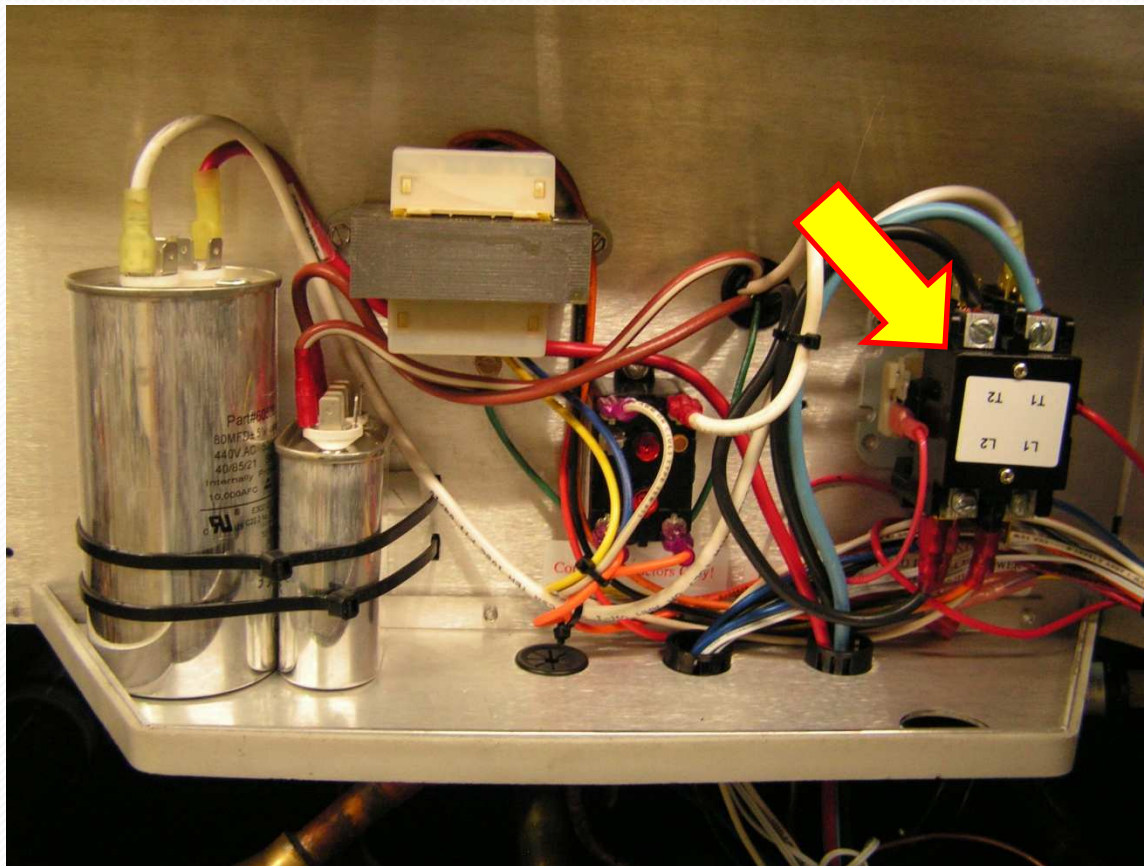

Danger! Disconnect power to heat pump before performing this operation.

Control Box Components


Fan Capacitor

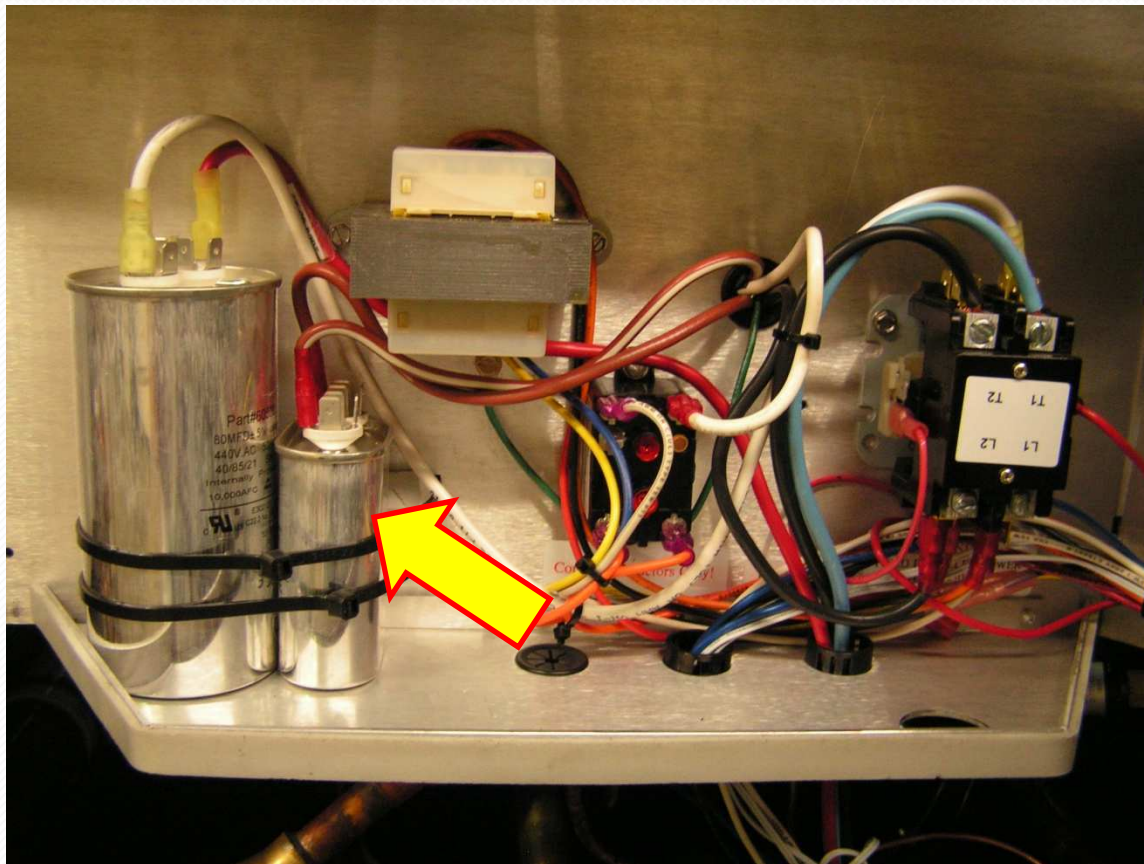

Danger! Disconnect power to heat pump before performing this operation.


Control Box Components

Fan Relay

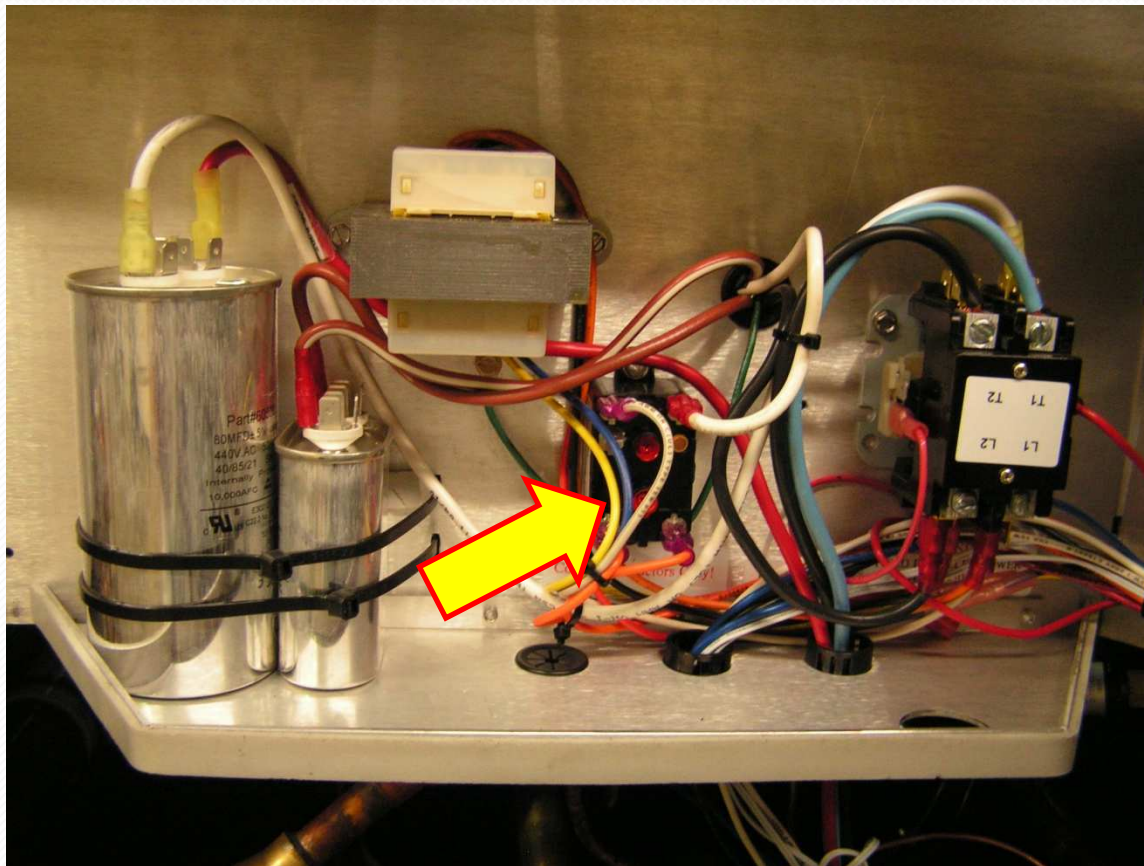

Danger! Disconnect power to heat pump before performing this operation.

Fan Motor

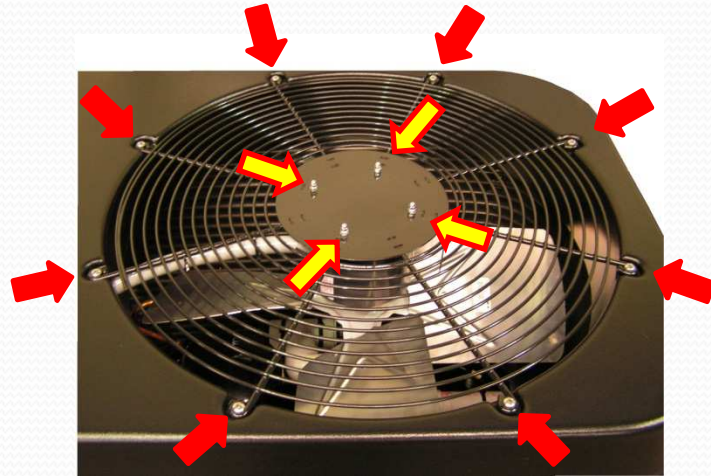


When replacing fan motor, remove entire fan assembly (disconnect wiring) then remove fan motor to avoid losing fan motor mounting nuts. Reassemble in reverse order.

Danger! Disconnect power to heat pump before performing this operation.

Control Box Components

Compressor Capacitor

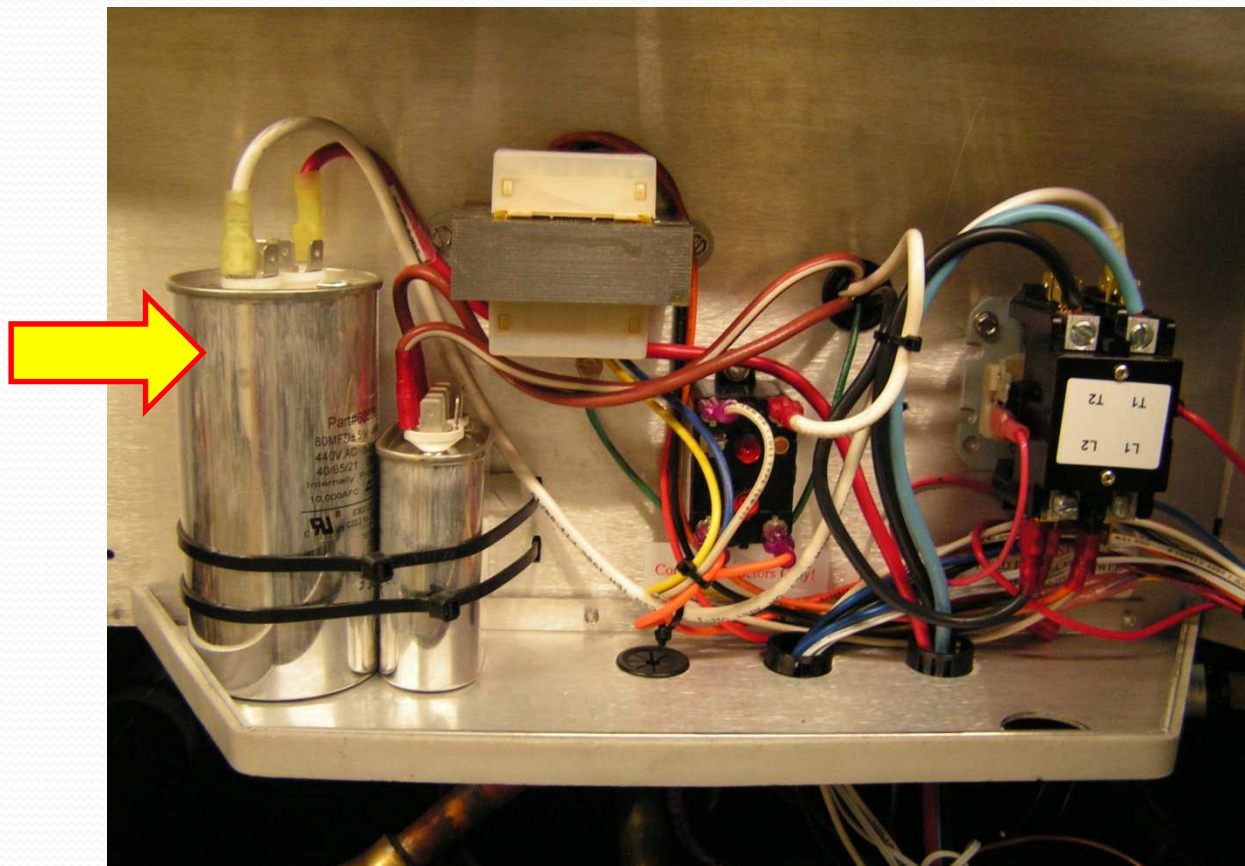

Danger! Disconnect power to heat pump before performing this operation.

Compressor Testing



Compressor Testing




Danger! Disconnect power to heat pump before performing this operation.

Fan Blade Assembly



Danger! Disconnect power to heat pump before performing this operation.

Water Manifold

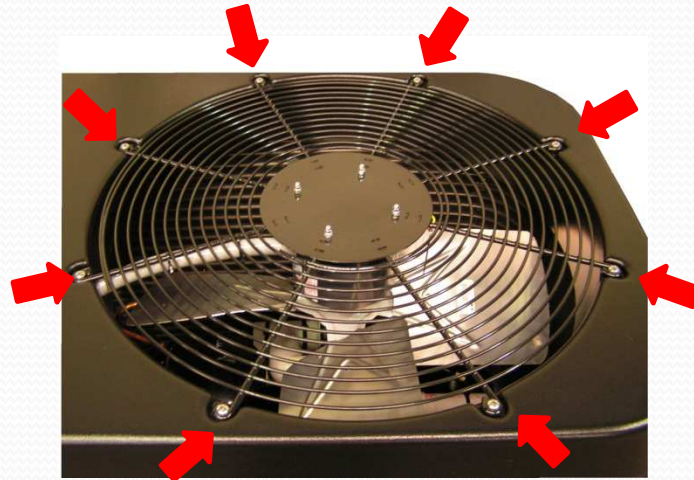



Questions?